

UC15 Hardware Design

UMTS/HSDPA Module Series

Rev. UC15_Hardware_Design_V1.6

Date: 2015-02-04



www.quectel.com



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233 Tel: +86 21 5108 6236 Mail: info@quectel.com

Or our local office, for more information, please visit:

http://www.quectel.com/support/salesupport.aspx

For technical support, to report documentation errors, please visit:

http://www.quectel.com/support/techsupport.aspx Or Email: <u>Support@quectel.com</u>

GENERAL NOTES

QUECTEL OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. THE INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THIS INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTABLE, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THIS CONTENTS ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2015. All rights reserved.



About the Document

History

Revision	Date	Author	Description
1.0	2013-11-26	Mountain ZHOU	Initial
1.1	2014-01-15	Huik Ll	 Modified packaging information of UC15 in the Chapter 7.3. Modified Figure 4 and Figure 11. Modified the description of command AT+CFUN in the Chapter 3.5.2.
1.2	2014-02-14	Huik Ll	Modified the frequency bands of UC15-A.
1.3	2014-04-21	Huik Ll	 Modified current consumption in Chapter 5.4. Added PCM feature in Chapter 3.12.
1.4	2014-11-11	Huik Ll	 Modified Figure 10 in the Chapter 3.7.1. Released PCM function. Updated the footprint of UC15 in Chapter 6.2. Modified SIM card interface in Chapter 3.13. Updated reference circuit of power supply in Figure 7. Added antenna requirements in Table 27.
1.5	2014-12-31	Huik Ll/ Rain ZHOU	 Updated the current consumption in Table 31. Updated the PCM supports format in Chapter 3.12. Updated the bottom view of the module in Figure 46. Added recommend stencil.
1.6	2015-02-04	Huik Ll/ Rain ZHOU	Added UC15-T product in UC15 module series.



Contents

Ab	out the Document	2
Со	ontents	3
Tal	ble Index	5
Fig	gure Index	6
1	Introduction	8
	1.1. Safety Information	
•		10
2	Product Concept	
	2.1. General Description2.2. Kev Features	
	2.2. Key Features2.3. Functional Diagram	
	2.3. Functional Diagram	
3	Application Interface	
	3.1. General Description	
	3.2. Pin Assignment	
	3.3. Pin Description	
	3.4. Operating Modes	
	3.5. Power Saving3.5.1. Sleep Mode	
	3.5.1.1 UART Application	
	3.5.1.2. USB Application with Suspend Function	
	3.5.1.3. USB Application with Suspend Function	
	3.5.2. Minimum Functionality Mode	
	3.6. Power Supply	
	3.6.1. Power Supply Pins	
	3.6.2. Decrease Voltage Drop	
	3.6.3. Reference Design for Power Supply	
	3.6.4. Monitor the Power Supply	
	3.6.5. VDD_EXT	
	3.7. Turn on and off Scenarios	29
	3.7.1. Turn on Module by PWRKEY Pin	29
	3.7.2. Turn off Module	31
	3.7.2.1. Turn off Module by PWRKEY Pin	31
	3.7.2.2. Turn off Module by AT Command	31
	3.7.2.3. Automatic Shutdown	
	3.8. Reset the Module	
	3.9. UART Interface	
	3.9.1. The Connection of UART	
	3.9.2. UART Application	
	3.10. Behavior of the RI	
	3.11. Analog Audio Interface	



	3.11.1	. Decrease TDD Noise and Other Noise	
	3.11.2	. Microphone Interfaces Application	41
	3.11.3	. Receiver and Speaker Interface Application	
	3.11.4	. Earphone Interface Application	44
	3.12. PC	M and I2C Interface	45
	3.13. US	IM Card Interface	
	3.14. US	B Interface	50
	3.15. AD	C Function	51
	3.16. Net	twork Status Indication	52
	3.17. Op	erating Status Indication	53
4	Antenna Ir	nterface	55
	4.1. Ant	tenna Interface	
	4.1.1.	Pin Definition	
	4.1.2.	Operating Frequency	
	4.1.3.		
	4.2. Ant	tenna Installation	
	4.2.1.	Antenna Requirement	
	4.2.2.	Install the Antenna with RF Connector	
5	Electrical,	Reliability and Radio Characteristics	60
		solute Maximum Ratings	
		wer Supply Ratings	
		erating Temperature	
		rrent Consumption	
		Output Power	
		Receiving Sensitivity	
		ectrostatic Discharge	
6		al Dimensions	
		chanical Dimensions of the Module	
		otprint of Recommendation	
		View of the Module	
	6.4. Bot	ttom View of the Module	70
7	-	nd Manufacturing	
		prage	
		nufacturing and Welding	
	7.3. Pao	ckaging	73
8		A Reference	
9		B GPRS Coding Scheme	
10		C GPRS Multi-slot Class	
11	Appendix	D EDGE Modulation and Coding Scheme	79



Table Index

TABLE 1: FREQUENCY BANDS OF UC15 SERIES	. 10
TABLE 2: UC15 KEY FEATURES	11
TABLE 3: IO PARAMETERS DEFINITION	
TABLE 4: PIN DESCRIPTION	. 17
TABLE 5: OVERVIEW OF OPERATING MODES	. 22
TABLE 6: VBAT AND GND PIN	. 26
TABLE 7: ELECTRICAL CHARACTERISTICS OF VDD_EXT	. 28
TABLE 8: PWRKEY PIN DESCRIPTION	. 29
TABLE 9: RESET_N PIN DESCRIPTION	. 32
TABLE 10: PIN DEFINITION OF THE UART INTERFACE	. 34
TABLE 11: LOGIC LEVELS OF DIGITAL I/O	. 34
TABLE 12: BEHAVIOR OF THE RI	. 39
TABLE 13: PIN DEFINITION OF THE AUDIO INTERFACE	. 39
TABLE 14: MICROPHONE CHARACTERISTICS	. 44
TABLE 15: SPEAKER CHARACTERISTICS	
TABLE 16: PIN DEFINITION OF PCM AND I2C INTERFACE.	. 46
TABLE 17: PIN DEFINITION OF THE USIM INTERFACES	. 47
TABLE 18: USB PIN DESCRIPTION	. 50
TABLE 19: PIN DEFINITION OF THE ADC	. 52
TABLE 20: CHARACTERISTICS OF THE ADC	
TABLE 21: PIN DEFINITION OF NETWORK INDICATOR	. 52
TABLE 22: WORKING STATE OF THE NETWORK INDICATOR	. 52
TABLE 23: PIN DEFINITION OF STATUS	. 53
TABLE 24: PIN DEFINITION OF THE RF ANTENNA	. 55
TABLE 25: MODULE OPERATING FREQUENCIES	. 55
TABLE 26: ANTENNA CABLE REQUIREMENTS	. 56
TABLE 27: ANTENNA REQUIREMENTS	. 57
TABLE 28: ABSOLUTE MAXIMUM RATINGS	. 60
TABLE 29: THE MODULE POWER SUPPLY RATINGS	. 61
TABLE 30: OPERATING TEMPERATURE	. 61
TABLE 31: MODULE CURRENT CONSUMPTION	. 62
TABLE 32: MODULE CONDUCTED RF OUTPUT POWER	. 64
TABLE 33: MODULE CONDUCTED RECEIVING SENSITIVITY	. 64
TABLE 34: ELECTROSTATICS DISCHARGE CHARACTERISTICS	. 65
TABLE 35: RELATED DOCUMENTS	. 74
TABLE 36: TERMS AND ABBREVIATIONS	. 74
TABLE 37: DESCRIPTION OF DIFFERENT CODING SCHEMES	. 77
TABLE 38: DESCRIPTION OF DIFFERENT CODING SCHEMES	. 78
TABLE 39: EDGE MODULATION AND CODING SCHEME	. 79



Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM	13
FIGURE 2: PIN ASSIGNMENT (TOP VIEW)	16
FIGURE 3: UART SLEEP APPLICATION	24
FIGURE 4: USB APPLICATION WITH SUSPEND FUNCTION	25
FIGURE 5: USB SLEEP APPLICATION WITHOUT SUSPEND FUNCTION	25
FIGURE 6: STAR STRUCTURE OF THE POWER SUPPLY	27
FIGURE 7: REFERENCE CIRCUIT OF POWER SUPPLY	28
FIGURE 8: TURN ON THE MODULE BY DRIVING CIRCUIT	29
FIGURE 9: TURN ON THE MODULE BY KEYSTROKE	30
FIGURE 10: TIMING OF TURNING ON MODULE	30
FIGURE 11: TIMING OF TURNING OFF MODULE	31
FIGURE 12: REFERENCE CIRCUIT OF RESET_N	33
FIGURE 13: TIMING OF RESETTING MODULE	
FIGURE 14: CONNECTION OF FULL FUNCTIONAL UART PORT	
FIGURE 15: CONNECTION OF THREE LINES UART PORT	35
FIGURE 16: CONNECTION OF UART PORT WITH HARDWARE FLOW CONTROL	36
FIGURE 17: 3.3V LEVEL MATCH CIRCUIT	36
FIGURE 18: 5V LEVEL MATCH CIRCUIT	
FIGURE 19: RS232 LEVEL SHIFT CIRCUIT	
FIGURE 20: RI BEHAVIOR	39
FIGURE 21: MICROPHONE REFERENCE DESIGN FOR AIN1&AIN2	
FIGURE 22: REFERENCE DESIGN FOR AOUT1	42
FIGURE 23: REFERENCE DESIGN WITH AN AMPLIFIER FOR AOUT1	
FIGURE 24: REFERENCE DESIGN FOR AOUT2	
FIGURE 25: REFERENCE DESIGN WITH AN AMPLIFIER FOR AOUT2	43
FIGURE 26: REFERENCE DESIGN FOR AN EARPHONE	44
FIGURE 27: PRIMARY MODE TIMING	45
FIGURE 28: AUXILIARY MODE TIMING	
FIGURE 29: REFERENCE CIRCUIT OF PCM APPLICATION WITH AUDIO CODEC	47
FIGURE 30: REFERENCE CIRCUIT OF THE 8-PIN USIM CARD	48
FIGURE 31: REFERENCE CIRCUIT OF THE 6-PIN USIM CARD	49
FIGURE 32: REFERENCE CIRCUIT OF USB APPLICATION	50
FIGURE 33: TEST POINTS OF FIRMWARE UPGRADE	51
FIGURE 34: REFERENCE CIRCUIT OF THE NETWORK INDICATOR	53
FIGURE 35: REFERENCE CIRCUIT OF THE STATUS	54
FIGURE 36: REFERENCE CIRCUIT OF ANTENNA INTERFACE	56
FIGURE 37: DIMENSIONS OF THE UF.L-R-SMT CONNECTOR (UNIT: MM)	58
FIGURE 38: MECHANICALS OF UF.L-LP CONNECTORS (UNIT: MM)	58
FIGURE 39: SPACE FACTOR OF MATED CONNECTOR (UNIT: MM)	59
FIGURE 40: UC15 TOP AND SIDE DIMENSIONS	
FIGURE 41: UC15 BOTTOM DIMENSIONS (BOTTOM VIEW)	67



FIGURE 42: BOTTOM PADS DIMENSIONS (BOTTOM VIEW)	67
FIGURE 43: RECOMMENDED FOOTPRINT (TOP VIEW)	68
FIGURE 44: RECOMMEND STENCIL	69
FIGURE 45: TOP VIEW OF THE MODULE	70
FIGURE 46: BOTTOM VIEW OF THE MODULE	70
FIGURE 47: REFLOW SOLDERING PROFILE	72
FIGURE 48: CARRIER TAPE	73



1 Introduction

This document defines the UC15 module and describes its hardware interface which are connected with your application and the air interface.

This document can help you quickly understand module interface specifications, electrical and mechanical details. Associated with application notes and user guide, you can use UC15 module to design and set up mobile applications easily.



1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating UC15 module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel and to incorporate these guidelines into all manuals supplied with the product. If not so, Quectel does not take on any liability for customer failure to comply with these precautions.

	Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) cause distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.
	Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers a Airplane Mode which must be enabled prior to boarding an aircraft.
•	Switch off your wireless device when in hospitals or clinics or other health care facilities. These requests are desinged to prevent possible interference with sentitive medical equipment.
SOS	Cellular terminals or mobiles operate over radio frequency signal and cellular network and cannot be guaranteed to connect in all conditions, for example no mobile fee or an invalid USIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.
	Your cellular terminal or mobile contains a transmitter and receiver. When it is ON , it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.
No. of the second se	In locations with potencially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potencially exposive atmospheres including fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders.



2 Product Concept

2.1. General Description

UC15 is an embedded UMTS/HSDPA module. Its UMTS-based modem provides data connectivity on HSDPA, WCDMA, EDGE and GPRS networks. UC15 offers a maximum data rate of 3.6Mbps on downlink and also supports GPRS/EDGE multi-slot class 12 as well. GPRS supports the coding schemes CS-1, CS-2, CS-3 and CS-4. EDGE supports CS-1 to CS-4 and MCS-1 to MCS-9 coding schemes. UC15 includes three variants, UC15-A, UC15-E and UC15-T. And all of them are divided into Telematics version and Data Only version. Telematics version supports voice and data, while Data Only version only supports data. This is convenient for you to choose the dedicated type based on the wireless network configuration. The following table shows the entire radio band configuration of UC15 series.

GSM	EGSM	DCS	PCS	UMTS	UMTS	UMTS	UMTS
850	900	1800	1900	850	900	1900	2100
•	•	•	•	•		٠	
	٠	•			٠		•
٠	•	•	•	•			•
		850 900 • • •	850 900 1800 • • • • • • • • •	850 900 1800 1900 • • • • • • • • • • • •	850 900 1800 1900 850 • • • • • • • • • • • • • • •	850 900 1800 1900 850 900 • • • • • • • • • • • • • • • • • •	850 900 1800 1900 850 900 1900 • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • •

Table 1: Frequency Bands of UC15 Series

More details about GPRS/EDGE multi-slot configuration and coding schemes, please refer to Appendix B, C and D.

With a tiny profile of 29.0mm \times 29.0mm \times 2.5mm, UC15 can meet almost all requirements for M2M application such as automotive, metering, tracking system, security solutions, routers, wireless POS, mobile computing devices, PDA phone and tablet PC, etc.

UC15 is an SMD type module, which can be embedded in your application through its 108-pin pads including 68 LCC signal pads and 40 other pads.

UC15 is integrated with internet service protocols such as TCP/UDP and PPP. Extended AT commands have been developed for you to use these internet service protocols easily.



2.2. Key Features

The following table describes the detailed features of UC15 module.

Table 2: UC15 Key Features

Feature	Details			
Power Supply	Supply voltage: 3.3V~4.3V			
	Typical supply voltage: 3.8V			
	UC15-E: GSM900/1800, UMTS900/2100			
Frequency Bands	UC15-A: GSM850/900/1800/1900, UMTS850/1900			
	UC15-T: GSM850/900/1800/1900, UMTS850/2100			
	HSDPA R5: Max 3.6Mbps (DL)			
	WCDMA R99: Max 384kbps (DL)/Max 384kbps (UL)			
Transmission Data	EDGE: Max 236.8kbps (support DL only)			
	GPRS: Max 85.6kbps (DL)/Max 85.6kbps (UL)			
	CSD: 64kbps			
	Class 4 (33dBm±2dB) for GSM850 and EGSM900			
Transmitting Power	Class 1 (30dBm±2dB) for DCS1800 and PCS1900			
	Class 3 (24dBm+1/-3dB) for UMTS850/900/1900/2100			
	HSDPA data rate is corresponded with 3GPP R5. 3.6Mbps on			
HSDPA and WCDMA	downlink.			
Features	WCDMA data rate is corresponded with 3GPP R99/R4. 384kbps on			
	downlink and 384kbps on uplink.			
	Support both 16-QAM and QPSK modulation.			
	GPRS:			
	Support GPRS multi-slot class 12 (10 by default)			
	Coding scheme: CS-1, CS-2, CS-3 and CS-4			
	Maximum of four Rx time slots per frame			
	EDGE:			
GSM/GPRS/EDGE	Support EDGE multi-slot class 12 (12 by default).			
Data Features	Support downlink only.			
	Support GMSK and 8-PSK for different MCS (Modulation and Coding			
	scheme).			
	Downlink coding schemes: CS 1-4 and MCS 1-9. CSD:			
	CSD transmission rates: 14.4kbps non-transparent. Support Unstructured Supplementary Services Data (USSD).			
Internet Protocol Features	Support TCP/UDP/PPP/FTP/HTTP/SMTP/MMS/SSL/PING/NITZ/ NTP/HTTPS/SMTPS protocols.			
internet Frotocol Features	Support the protocols PAP (Password Authentication Protocol) and			
	סעקרטו וויד פוטנטנטוא דאר (רמאשטוע אענוופווונמווטון דוטנטנטו) מוע			





	CHAP (Challenge Handshake Authentication Protocol) usually used for PPP connections.
SMS	Text and PDU mode Point to point MO and MT SMS cell broadcast SMS storage: ME by default
USIM Interface	Support USIM/SIM card: 1.8V, 3.0V
Audio Features	Support two analog input channels and two analog output channels. GSM: HR/FR/EFR/AMR/AMR-WB WCDMA: AMR/AMR-WB Echo cancellation and noise suppression
PCM Interface	Used for audio function with external codec. Support 8-bit A-law and µ-law, and 16-bit linear data formats. Support long frame sync and short frame sync. Support master and slave mode, but must be the master in long frame sync.
UART Interface	Seven lines on UART interface. Support RTS and CTS hardware flow control. Baud rate can reach up to 921600bps, 115200bps by default. Used for AT command, data transmission and firmware upgrade.
USB Interface	 Compliant with USB 2.0 specification (slave only), the data transfer rate can reach up to 480 Mbps at high speed mode. Used for AT command communication, data transmission, software debug and firmware upgrade. USB driver: support Windows XP, Windows Vista, Windows 7, Windows 8, Windows CE5.0/6.0, Windows Mobile 6.1/6.5, Linux 2.6 or later, Android 2.3/4.0 or later.
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and Quectel enhanced AT commands.
Network Indication	Indicate network activity status.
Antenna Interface	Connected via 50ohm antenna pad.
Physical Characteristics	Size: 29.0±0.15 × 29.0±0.15 × 2.5±0.2 mm Weight: Approx. 4.3g
Temperature Range	Normal operation: -35° C ~ $+80^{\circ}$ C Restricted operation: -40° C ~ -35° C and $+80^{\circ}$ C ~ $+85^{\circ}$ C ¹⁾ Storage temperature: -45° C ~ $+90^{\circ}$ C
Firmware Upgrade	USB interface (recommend) and UART interface.
RoHS	All hardware components are fully compliant with EU RoHS directive.




NOTE

"¹)" means when the module works within this temperature range, RF performance might degrade. For example, the frequency error or the phase error would increase.

2.3. Functional Diagram

The following figure shows a block diagram of UC15 and illustrates the major functional parts.

- Power management unit
- Baseband
- DDR+NAND flash
- Radio frequency
- Peripheral interface

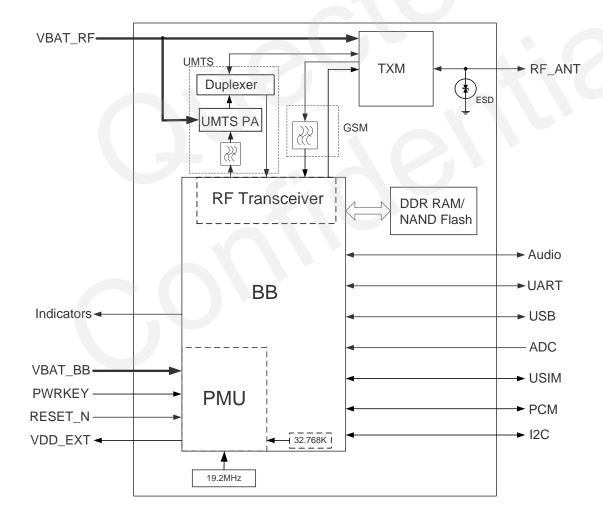





2.4. Evaluation Board

In order to help you to develop applications with UC15, Quectel supplies an evaluation board (EVB), RS-232 to USB cable, USB data cable, power adapter, earphone, antenna and other peripherals to control or test the module. For details, please refer to *document [2]*.





3 Application Interface


3.1. General Description

UC15 is equipped with a 68-pin 1.3mm pitch SMT pads plus 40-pin ground pads and reserved pads that connect to cellular application platform. Sub-interfaces included in these pads are described in details in the following chapters:

- Power supply
- UART interface
- Audio interface
- PCM interface
- USIM interface
- USB interface
- ADC interface
- Indicator interface



3.2. Pin Assignment

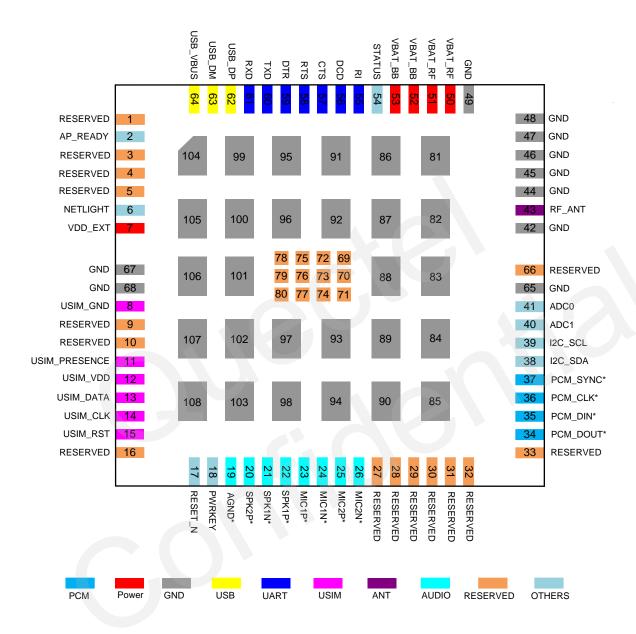

The following figure shows the pin assignment of the UC15 module.



NOTES

- 1. Keep all RESERVED pins and unused pins unconnected.
- 2. GND pads 81~108 should be connected to ground in the design. RESERVED pads 69~80 are used for factory test, they are unused in your design, you can ignore them and don't design them in schematic and PCB decal.
- 3. "*" means these functions are only supported in Telematics version.



3.3. Pin Description

The pin definition of UC15 is shown in table 4.

Table 3: IO Parameters Definition

Description
Bidirectional input/output
Digital input
Digital output
Power input
Power output
Analog input
Analog output

Table 4: Pin Description

Power Supply						
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
VBAT_BB	52,53	PI	Power supply for module baseband part.	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be able to provide sufficient current up to 0.8A.	
VBAT_RF	50,51	PI	Power supply for module RF part.	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be able to provide sufficient current in a transmitting burst which typically rises to 2.0A.	
VDD_EXT	7	PO	Provide 2.6V for external circuit.	Vnorm=2.6V I _o max=100mA	It is recommend to add a 2.2~4.7uF bypass capacitor when using this pin for power supply.	



GND	42,44~49 65,67~68 ,81~108		Ground			
Turn On/Off						
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
PWRKEY	18	DI	Turn on/off the module.	R _{PU} ≈200kΩ V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	Pull-up to 1.8V internally.	
RESET_N	17	DI	Reset the module.	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	Pull-up to 1.8V internally. If unused, keep it open.	
Indication						
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
STATUS	54	DO	Indicate the module operating status.	V _{OH} max=2.6V V _{OH} min=2.15V V _{OL} max=0.45V	2.6V power domain, if unused, keep it open.	
NETLIGHT	6	DO	Indicate the module network activity status.	V _{OH} max=2.6V V _{OH} min=2.15V V _{OL} max=0.45V	2.6V power domain, if unused, keep it open.	
USB Interfac	e					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
USB_VBUS	64	PI	USB detection.	Vmax=5.25V Vmin=3.0V Vnorm=5.0V		
USB_DP	62	IO	USB differential data bus.	Compliant with USB 2.0 standard specification.	Require differential impedance of 90Ω.	
USB_DM	63	IO	USB differential data bus.	Compliant with USB 2.0 standard specification.	Require differential impedance of 90Ω.	
USIM Interfa	се					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	



USIM_GND	8		Specified ground for USIM card.		
USIM_VDD	12	PO	Power supply for USIM card.	For 1.8V USIM: Vmax=1.95V Vmin=1.65V For 3.0V USIM: Vmax=3.0V Vmin=2.7V	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	13	Ю	Data signal of USIM card.	For 1.8V USIM: $V_{IL}max=0.6V$ $V_{IH}min=1.2V$ $V_{OL}max=0.45V$ $V_{OH}min=1.35V$ For 3.0V USIM: $V_{IL}max=1.0V$ $V_{IH}min=1.95V$ $V_{OL}max=0.45V$ $V_{OH}min=2.55V$	Pull-up to USIM_VDD with 10k resistor internally.
USIM_CLK	14	DO	Clock signal of USIM card.	For 1.8V USIM: $V_{OL}max=0.45V$ $V_{OH}min=1.35V$ For 3.0V USIM: $V_{OL}max=0.45V$ $V_{OH}min=2.55V$	
USIM_RST	15	DO	Reset signal of USIM card.	For 1.8V USIM: $V_{OL}max=0.45V$ $V_{OH}min=1.35V$ For 3.0V USIM: $V_{OL}max=0.45V$ $V_{OH}min=2.55V$	
USIM_ PRESENCE	11	DI	USIM card input detection.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain. If unused, keep it open.
ADC Interface	е				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment



ADC0	41	AI	General purpose analog to digital converter.	Voltage range: 0V to 2.1V	lf unused, keep it open.
ADC1	40	AI	General purpose analog to digital converter.	Voltage range: 0V to 2.1V	lf unused, keep it open.
UART Interfa	се				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RI	55	DO	Ring indicator.	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, if unused, keep it open.
DCD	56	DO	Data carrier detection.	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, if unused, keep it open.
CTS	57	DO	Clear to send.	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, if unused, keep it open.
RTS	58	DI	Request to send.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain, if unused, keep it open.
DTR	59	DI	Data terminal ready.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain. Pull-up by default, if unused, keep it open.
TXD	60	DO	Transmit data.	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, if unused, keep it open.
RXD	61	DI	Receive data.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain, if unused, keep it open.
RF Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RF_ANT	43	IO	RF antenna pad	50Ω impedance	
Analog Audio	o Interface				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
MIC1P	23	AI	Audio positive input.		If unused, keep it open.
MIC1N	24	AI	Audio negative input.		If unused, keep it open.



MIC2P	25	AI	Auxiliary audio positive input.		lf unused, keep it open.
MIC2N	26	AI	Auxiliary audio negative input.		lf unused, keep it open.
SPK1P	22	AO	Audio positive output.		lf unused, keep it open.
SPK1N	21	AO	Audio negative output.		lf unused, keep it open.
SPK2P	20	AO	Auxiliary audio positive output.		lf unused, keep it open.
AGND	19		Analog ground	Ground	Separate ground for external audio circuits.
PCM Interfa	ce				
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PCM_DOUT	34	DO	PCM data output.	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, i unused, keep it open.
PCM_DIN	35	DI	PCM data input.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain, i unused, keep it open
PCM_CLK	36	Ю	PCM data bit clock.	$V_{IL}min=-0.3V$ $V_{IL}max=0.91V$ $V_{IH}min=1.69V$ $V_{IH}max=2.9V$ $V_{OL}max=0.45V$ $V_{OH}min=2.15V$	2.6V power domain, i unused, keep it open
PCM_SYNC	37	ю	PCM data frame sync signal	V _{OL} max=0.45V V _{OH} min=2.15V	2.6V power domain, i unused, keep it open.
I2C Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
I2C_SDA	38	Ю	I2C serial data.	$V_{IL}min=-0.3V$ $V_{IL}max=0.91V$ $V_{IH}min=1.69V$ $V_{IH}max=2.9V$	External pull-up resistor is required. 2.6V only, if unused
				V _{OL} max=0.45V V _{OH} min=2.15V	keep it open.



2.6V only, if unused, keep it open.

Other Pins						
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment	
AP_READY	2	DI	Application process or sleep state detection.	V _{IL} min=-0.3V V _{IL} max=0.91V V _{IH} min=1.69V V _{IH} max=2.9V	2.6V power domain, if unused, keep it open.	
RESERVED	1,3~5,9~ 10,16,27 ~33,66, 69~80		Reserved		Keep these pins unconnected.	

3.4. Operating Modes

The table below briefly summarizes the various operating modes.

Mode	Details	
	GSM Idle	Software is active. The module has registered to the GSM network and is ready to send and receive data.
	GSM Talk/Data	GSM connection is ongoing. In this mode, the power consumption is decided by the configuration of power control level (PCL), dynamic DTX control and the working RF band.
	GPRS Idle	The module is ready for GPRS data transfer, but no data transfer is going on. In this case, power consumption depends on network setting and GPRS configuration.
Normal Operation	GPRS Data	There is GPRS data in transfer (PPP, TCP or UDP). In this mode, power consumption is decided by the PCL, working RF band and GPRS multi-slot configuration.
	EDGE Idle	The module is ready for data transfer in EDGE mode, but no data is currently sent or received. In this case, power consumption depends on network settings and EDGE configuration.
	EDGE Data	There is EDGE data in transfer (PPP, TCP or UDP). In this mode, power consumption is decided by the PCL, working RF band and EDGE multi-slot configuration.



	UMTS Idle	Software is active. The module has registered to the UMTS network and the module is ready to send and receive data.	
	UMTS Talk/Data	UMTS connection is ongoing. In this mode, the power consumption is decided by network setting (e.g. TPC pattern) and data transfer rate.	
	HSDPA Idle	Software is active. The module has registered to the HSDPA network and the module is ready to send and receive data.	
	HSDPA Data	HSDPA data transfer is ongoing. In this mode, the power consumption is decided by network setting (e.g. TPC pattern) and data transfer rate.	
Minimum Functionality Mode	AT+CFUN=0 command can set the module entering into a minimum functionality mode without removing the power supply. In this case, both RF function and USIM card will be invalid.		
Sleep Mode	In this mode, the current consumption of the module will be reduced to the minimal level. During this mode, the module can still receive paging message, SMS, voice call and TCP/UDP data from the network normally. Any URC can be output even the module in Sleep Mode.		
Power Down Mode	In this mode, the power management unit shuts down the power supply for the baseband part and RF part. Software is not active. The serial interface is not accessible. Operating voltage (connected to VBAT_RF and VBAT_BB) remains applied.		

3.5. Power Saving

3.5.1. Sleep Mode

UC15 is able to reduce its current consumption to a minimum value during the sleep mode. The following section describes power saving procedure of UC15.

3.5.1.1. UART Application

If application processor communicates with module via UART interface, the following preconditions can let the module enter into the sleep mode.

- Execute AT command **AT+QSCLK=1** to enable the sleep mode.
- Drive DTR to high level.



The following figure shows the connection between the module and application processor.

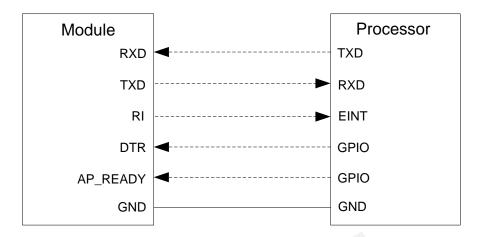


Figure 3: UART Sleep Application

The RI of module is used to wake up the processor, and AP_READY will detect the sleep state of processor (can be configured to high level or low level detection). You should pay attention to the level match shown in dotted line between module and processor.

Drive DTR to low level will wake up the module.

3.5.1.2. USB Application with Suspend Function

If application processor communicates with module via USB interface, and processor supports USB suspend function, following preconditions can let the module enter into the sleep mode.

- Execute AT command **AT+QSCLK=1** to enable the sleep mode.
- The processor's USB bus which is connected with the module USB interface enters into suspended state.



The following figure shows the connection between the module and processor.

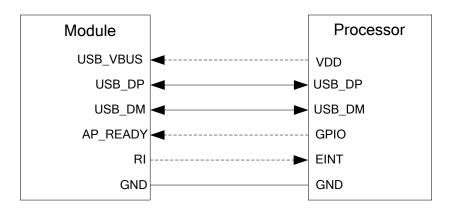


Figure 4: USB Application with Suspend Function

When the processor's USB bus returns to resume state, the module will be woken up.

3.5.1.3. USB Application without Suspend Function

If application processor communicates with module via USB interface, and processor does not support USB suspend function, you should disconnect USB_VBUS with additional control circuit to let the module enter into sleep mode.

- Execute AT command **AT+QSCLK=1** to enable the sleep mode.
- Disconnect USB_VBUS.

The following figure shows the connection between the module and application processor.

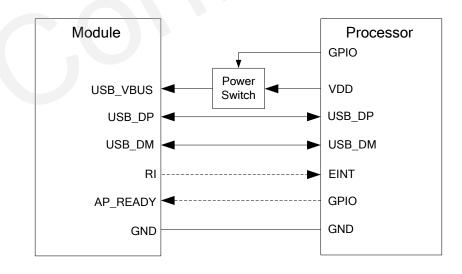


Figure 5: USB Sleep Application without Suspend Function



Supply power to USB_VBUS will wake up the module.

In sleep mode, the module can still receive paging message, SMS, voice call and TCP/UDP data from the network normally, but the UART port is not accessible.

3.5.2. Minimum Functionality Mode

Minimum functionality mode reduces the functionality of the module to minimum level, thus minimizes the current consumption at the same time. This mode can be set as below:

Command AT+CFUN provides the choice of the functionality levels: <fun>=0, 1, 4.

- **AT+CFUN=0**: Minimum functionality, RF part and USIM card will be closed.
- AT+CFUN=1: Full functionality (by default).
- AT+CFUN=4: Disable RF function (airplane mode). All AT commands related to RF function are not accessible.

For detailed information about command AT+CFUN, please refer to document [1].

3.6. Power Supply

3.6.1. Power Supply Pins

UC15 provides four VBAT pins to connect with the external power supply. There are two separate voltage domains for VBAT.

- VBAT_RF with two pads for module RF.
- VBAT_BB with two pads for module baseband.

The following table shows the VBAT pins and ground pins.

Table 6: VBAT and GND Pin

Pin Name	Pin No.	Description	Min.	Тур.	Max.	Unit
VBAT_RF	50,51	Power supply for module RF	3.3	3.8	4.3	V
VBAT_BB	52,53	Power supply for module baseband	3.3	3.8	4.3	V
GND	42,44~49,65, 67~68,81~108	Ground	-	-	-	-



3.6.2. Decrease Voltage Drop

The power supply range of the module is 3.3~4.3V. Because of the voltage drop during the transmitting time, a bypass capacitor of about 100µF with low ESR should be used. Multi-layer ceramic chip (MLCC) capacitor can provide the best combination of low ESR. Three ceramic capacitors (100nF, 33pF, 10pF) are recommended to be applied to the VBAT pins. The capacitors should be placed close to the VBAT pins of UC15. The following figure shows star structure of the power supply.

The main power supply from an external application should be a single voltage source and has to be expanded to two sub paths with star structure. In addition, in order to get a stable power source, it is suggested to use a zener diode of which reverse zener voltage is 5.1V and dissipation power is more than 0.5W.

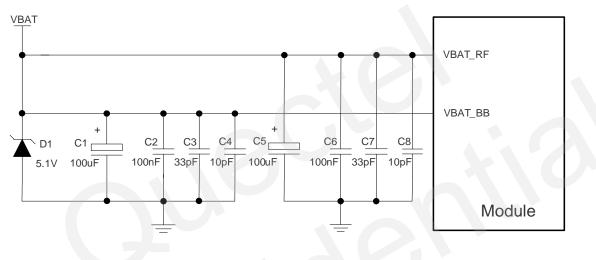


Figure 6: Star Structure of the Power Supply


Please pay special attention to the power supply design for applications. Make sure the input voltage will never drop below 3.3V. If the voltage drops below 3.3V, the module will turn into unnormal state. The PCB traces from the VBAT pins to the power source must be wide enough to ensure that there is not too much voltage drop occurs in the transmitting procedure. The width of VBAT_BB trace should be no less than 1mm, and the width of VBAT_RF trace should be no less than 2mm, and the principle of the VBAT trace is the longer, the wider.

3.6.3. Reference Design for Power Supply

The power design for the module is very important, since the performance of power supply for the module largely depends on the power source. The power supply is capable of providing the sufficient current up to 2A at least. If the voltage drop between the input and output is not too high, it is suggested to use a LDO to supply power for module. If there is a big voltage difference between the input source and the desired output (VBAT), a buck converter is preferred to be used as a power supply.



The following figure shows a reference design for +5V input power source. The designed output for the power supply is about 3.8V and the maximum load current is 3A.

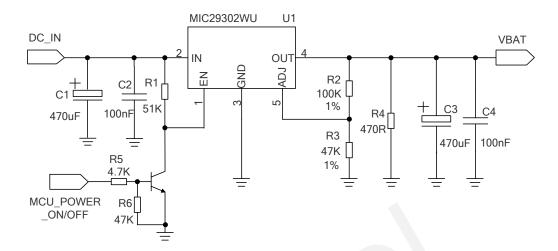



NOTE

When the module cannot be turned off by PWRKEY pin or other abnormalities occur, it is suggested to switch off the power supply for module to shut it down, and then power on again.

3.6.4. Monitor the Power Supply

You can use the **AT+CBC** command to monitor the VBAT_BB voltage value. For more details, please refer to *document [1]*.

3.6.5. VDD_EXT

UC15 has a LDO power output, named VDD_EXT. The VDD_EXT is available and output voltage is 2.6V by default, rated at 100mA.

The following table shows electrical characteristics of VDD_EXT.

Symbol	Description	Min.	Тур.	Max.	Unit
VDD_EXT	Output voltage	2.5	2.6	2.7	V
I _{OUT}	Output current	-	-	100	mA

Table 7: Electrical Characteristics of VDD_EXT



3.7. Turn on and off Scenarios

3.7.1. Turn on Module by PWRKEY Pin

The following table shows the pin definition of PWRKEY.

Table 8: PWRKEY Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
PWRKEY	18	Turn on/off the module	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	Pull-up to 1.8V internally with 200k Ω resistor.

When UC15 is in power down mode, it can be turned on to normal mode by driving the PWRKEY pin to low level at least 0.1s. It is recommended to use an open collector driver to control the PWRKEY. The STATUS outputs high level after module is turned on successfully. A simple reference circuit is illustrated in the following figure.

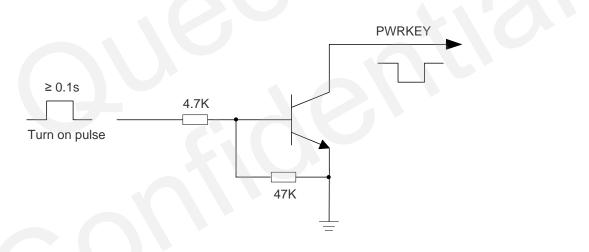


Figure 8: Turn on the Module by Driving Circuit

The other way to control the PWRKEY is to use a button directly. A TVS component is indispensable to be placed nearby the button for ESD protection. When pressing the key, electrostatic strike may generate from finger. A reference circuit is shown in the following figure.




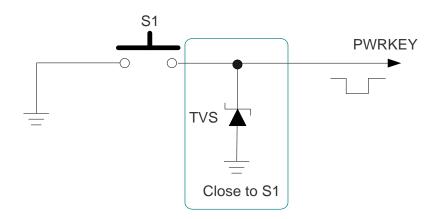


Figure 9: Turn on the Module by Keystroke

The turn on scenarios is illustrated as the following figure.



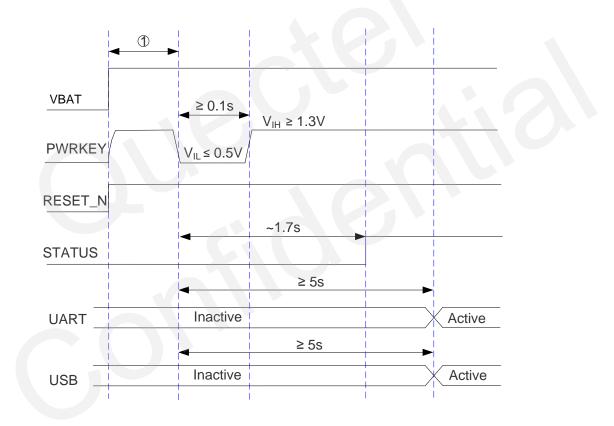

NOTE Make sure that VBAT is stable before pulling down PWRKEY pin. The time between them is recommended to be more than 0.03s.



3.7.2. Turn off Module

The following procedures can be used to turn off the module:

- Normal power down procedure: Turn off the module by PWRKEY pin.
- Normal power down procedure: Turn off the module by command **AT+QPOWD**.
- Automatic shutdown: Turn off the module automatically if under-voltage or over-voltage is detected.

3.7.2.1. Turn off Module by PWRKEY Pin

Drive the PWRKEY to low level at least 0.6s, the module will execute power-down procedure after PWRKEY is released. The power-down scenario is illustrated as the following figure.

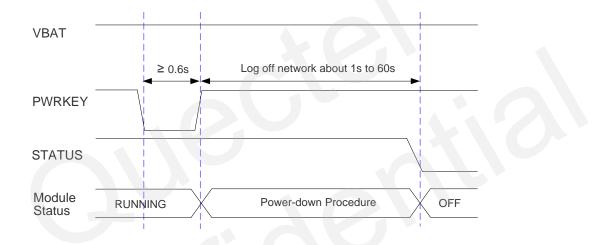


Figure 11: Timing of Turning off Module

During power-down procedure, module will send out URC "NORMAL POWER DOWN" via URC port first, then log off network and save important data. After logging off, module sends out "POWERED DOWN" and shuts down the internal power supply. The power on VBAT pins are not allowed to be switched off before the URC "POWERED DOWN" is output to avoid data loss. If module is not logged off within 60s, module will force to shut down internal power supply.

After that moment, the module enters into power down mode, no other AT commands can be executed.

3.7.2.2. Turn off Module by AT Command

It is also a safe way to use AT command **AT+QPOWD** to turn off the module, which is similar to the way of turning off the module via PWRKEY Pin. Please refer to *document [1]* for details about the AT command of **AT+QPOWD**.



3.7.2.3. Automatic Shutdown

The module will constantly monitor the voltage applied on the VBAT_BB, if the voltage \leq 3.5V, the following URC will be presented:

+QIND: "vbatt",-1

If the voltage \geq 4.21V, the following URC will be presented:

+QIND: "vbatt",1

The uncritical voltage is 3.3V to 4.3V, If the voltage > 4.35V or < 3.2V, the module would automatically shut down itself.

If the voltage < 3.2V, the following URC will be presented:

+QIND: "vbatt",-2

If the voltage > 4.35V, the following URC will be presented:

+QIND: "vbatt",2

NOTE

The value of voltage threshold can be revised by AT command **AT+QCFG="vbatt**", refer to *document* [1] for details.

3.8. Reset the Module


The RESET_N can be used to reset the module.

Table 9: RESET_N Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
RESET_N	17	Reset the module.	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	Pull-up to 1.8V internally. If unused, keep it open.




You can reset the module by driving the RESET_N to low level voltage for 0.05~0.2s and then releasing. Reference circuit is shown in the following figure.

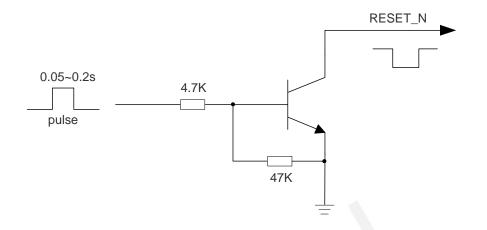



The reset scenario is illustrated as the following figure.

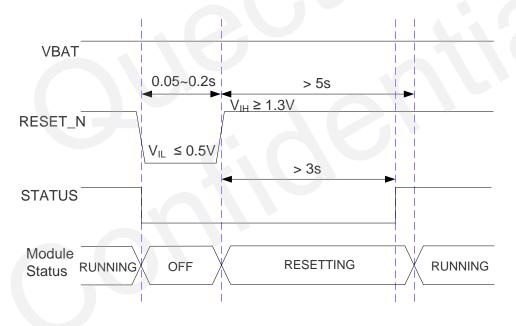



NOTE

The low-level pulse through the RESET_N pin cannot last for more than 0.2s, otherwise the module will be powered off.



3.9. UART Interface

The module provides one 7-wire UART interface, and is designed as the DCE (Data Communication Equipment), following the traditional DCE-DTE (Data Terminal Equipment) connection. UART interface supports 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800 and 921600bps baud rate. The default is 115200bps, please refer to *document [1]* about AT+IPR command for details. This interface can be used for data transmission, AT communication and firmware upgrade.

Pin Name	Pin No.	I/O	Description	Comment
RI	55	DO	Ring indicator	2.6V power domain. If unused, keep it open.
DCD	56	DO	Data carrier detection	2.6V power domain. If unused, keep it open.
CTS	57	DO	Clear to send	2.6V power domain. If unused, keep it open.
RTS	58	DI	Request to send	2.6V power domain. If unused, keep it open.
DTR	59	DI	Data terminal ready	2.6V power domain. If unused, keep it open.
TXD	60	DO	Transmit data	2.6V power domain. If unused, keep it open.
RXD	61	DI	Receive data	2.6V power domain. If unused, keep it open.

Table 10: Pin Definition of the UART Interface

The logic levels are described in the following table.

Table 11: Logic Levels of Digital I/O

Parameter	Min.	Max.	Unit
V _{IL}	-0.3	0.91	V
V _{IH}	1.69	2.9	V
V _{OL}	0	0.45	V
V _{OH}	2.15	2.6	V



3.9.1. The Connection of UART

The connection between module and host via UART port is very flexible. Three connection ways are illustrated as below.

UART port connection is shown as below when it is applied in modulation-demodulation.

Module		PC
ТХД		TXD
RXD	4	RXD
RTS	◀	RTS
CTS		CTS
DTR	◀	DTR
DCD		DCD
RI		RING
GND		GND

Figure 14: Connection of Full Functional UART Port

Three lines connection is shown as below.

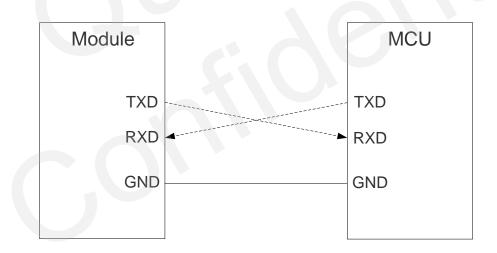


Figure 15: Connection of Three Lines UART Port

UART port with hardware flow control is shown as below. This connection will enhance the reliability of the mass data communication.



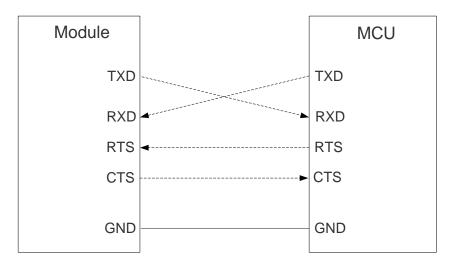


Figure 16: Connection of UART Port with Hardware Flow Control

NOTE

The module disables the hardware flow control by default. AT command **AT+IFC=2,2** is used to enable hardware flow control. AT command **AT+IFC=0,0** is used to disable the hardware flow control. For more details, please refer to *document [1]*.

3.9.2. UART Application

The reference design of 3.3V level match is shown as below. When the peripheral MCU/ARM system is 3V, the divider resistor should be changed from 3.6K to 6.8K.

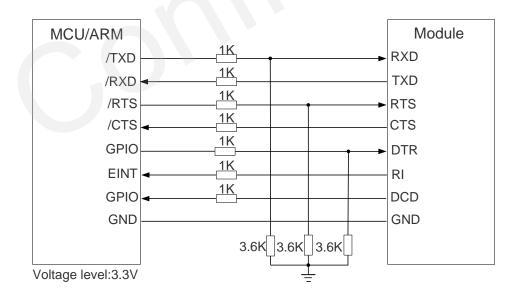


Figure 17: 3.3V Level Match Circuit



The reference design of 5V level match is shown as below. The construction of dotted line can refer to the construction of solid line. Please pay attention to direction of connection. Input dotted line of module should refer to input solid line of the module. Output dotted line of module should refer to output solid line of the module.

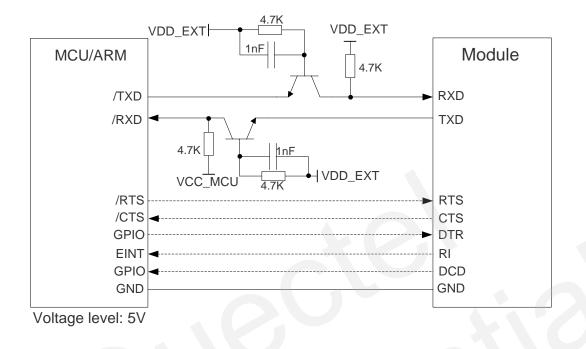


Figure 18: 5V Level Match Circuit

The following figure is an example of connection between module and PC. A RS232 level shifter IC or circuit must be inserted between module and PC, since UART interface do not support the RS232 level, while support the CMOS level only.



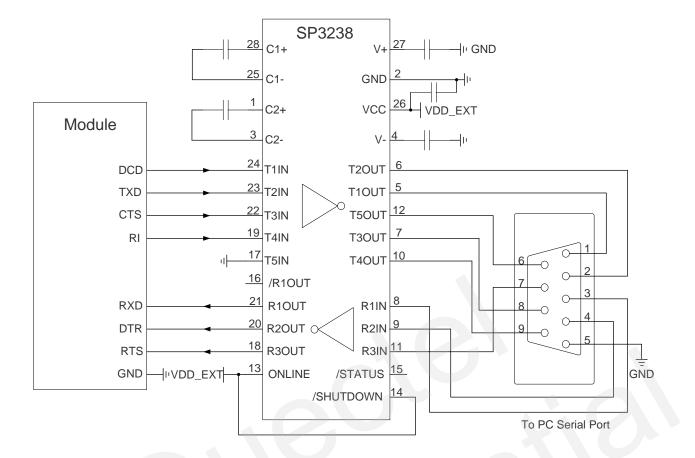


Figure 19: RS232 Level Shift Circuit

NOTES

- 1. Rising edge on DTR will let the module exit from the data mode by default. It can be disabled by command. Refer to *document [1]* about AT&D and AT&V for details.
- 2. DCD is used as data mode indication. Please refer to *document [1]* about command **AT&C** and **AT&V** for details.

3.10. Behavior of the RI

You can use command **AT+QCFG="risignaltype"**, "physical" to configure RI behavior:

No matter which port URC is presented on, URC will trigger the behavior on RI pin.

NOTE


URC can be output from UART port, USB AT port and USB modem port by command **AT+QURCCFG**. The default port is USB AT port.



In additional, RI behavior can be configured flexible. The default behavior of the RI is shown as below.

Table 12: Behavior of the RI

State	Response
Idle	RI keeps in high level.
URC	RI outputs 120ms low pulse when new URC is reported.

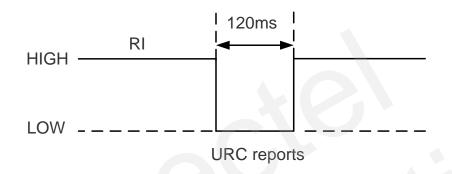



The RI behavior can be changed by command **AT+QCFG="urc/ri/ring**", refer to **document [1]** for details.

3.11. Analog Audio Interface

The module provides two analog input channels and two analog output channels.

Table 13:	Pin	Definition	of the	Audio	Interface
-----------	-----	------------	--------	-------	-----------

Interface	Pin Name	Pin No.	I/O	Description	Comment
	MIC1P	23	AI	Audio positive input	If it is unused, keep open.
AIN1/	MIC1N	24	AI	Audio negative input	If it is unused, keep open.
AOUT1	SPK1P	22	AO	Audio positive output	If it is unused, keep open.
	SPK1N	21	AO	Audio negative output	If it is unused, keep open.



	MIC2P	25	AI	Auxiliary audio positive input	If it is unused, keep open.
AIN2/	MIC2N	26	AI	Auxiliary audio negative input	If it is unused, keep open.
AOUT2	SPK2P	20	AO	Auxiliary audio positive output	If it is unused, keep open.
	AGND	19		Analog ground	Suggested to be used for audio circuit.

- AIN1 and AIN2 may be used for both microphone and line inputs. An electret microphone is usually recommended. AIN1 and AIN2 are both differential input channels.
- AOUT1 and AOUT2 may be used for both receiver and speaker outputs. AOUT1 channel is typically used for a receiver, while AOUT2 channel is typically used for headset or speaker. AOUT1 channel is a differential channel and AOUT2 is a single-ended channel. SPK2P and AGND can establish a pseudo differential mode. Both AOUT1 and AOUT2 support voice and ringtone output.
- These two audio channels can be swapped by **AT+QAUDPATH** command. For more details, please refer to *document [1].*

Use command AT+QAUDPATH to select audio channel:

- 0: AIN1/AOUT1 (normal audio channel), the default value is 0.
- 1: AIN2/AOUT2 (auxiliary audio channel).
- 2: PCM channel.

For each channel, you can use **AT+QMIC** to adjust the input gain level of microphone. You can also use **AT+CLVL** to adjust the output gain level of receiver and speaker. **AT+QSIDET** is to set the side-tone gain level. For more details, please refer to *document [1]*.

3.11.1. Decrease TDD Noise and Other Noise

The 33pF capacitor is applied for filtering out 850/900MHz RF interference when the module is transmitting at GSM850/EGSM900MHz. TDD noise could be heard without this capacitor. Moreover, the 10pF capacitor here is for filtering out 1800/1900MHz RF interference. However, the self-resonant frequency point of a capacitor largely depends on the material and production technique. Therefore, customer should depend on its capacitor vendor to choose the most suitable capacitor for filtering out GSM850MHz, EGSM900MHz, DCS1800MHz and PCS1900MHz separately.

The severity degree of the RF interference in the voice channel during GSM transmitting period largely depends on the application design. In some cases, GSM850/EGSM900 TDD noise is more severe; while in other cases, DCS1800/PCS1900 TDD noise is more obvious. Therefore, customer can have a choice based on test results. Sometimes, even no RF filtering capacitor is required.



The capacitor which is used for filtering out RF noise should be close to audio interface. Audio alignment should be as short as possible.

In order to decrease radio or other signal interference, the position of RF antenna should be kept away from audio interface and audio alignment. Power alignment and audio alignment should not be parallel, and power alignment should be far away from audio alignment.

The differential audio traces should be placed according to the differential signal layout rules.

3.11.2. Microphone Interfaces Application

AIN1/AIN2 channels come with internal bias supply for external electret microphone. A reference circuit is shown in the following figure.

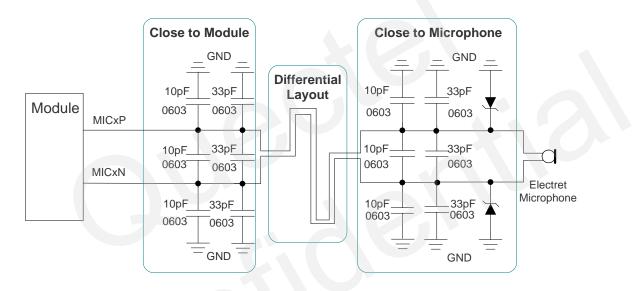


Figure 21: Microphone Reference Design for AIN1&AIN2



3.11.3. Receiver and Speaker Interface Application

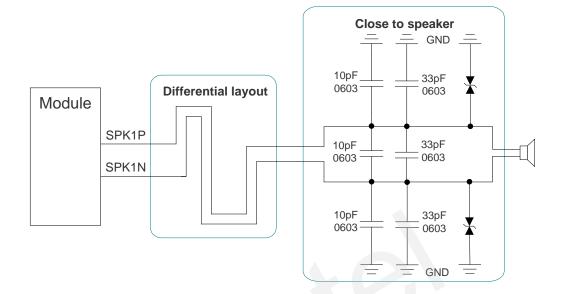


Figure 22: Reference Design for AOUT1



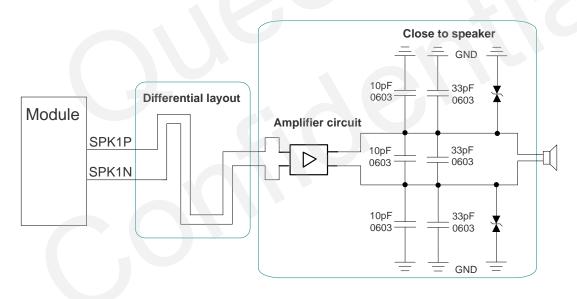


Figure 23: Reference Design with an Amplifier for AOUT1





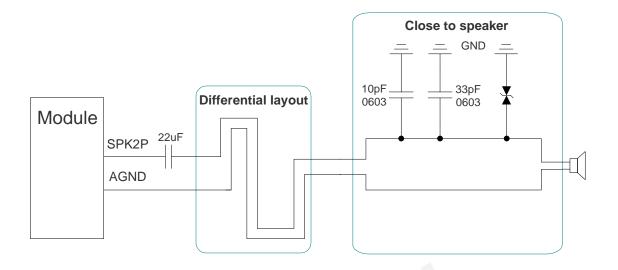

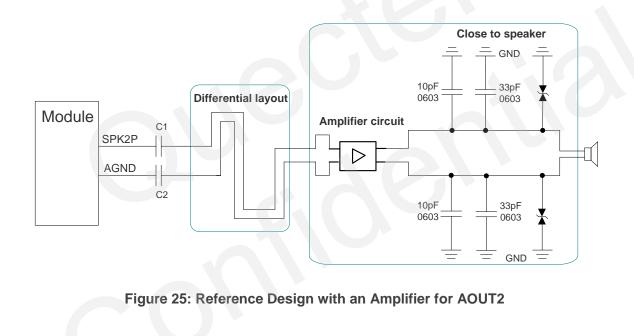

NOTE

The value of C1 and C2 depends on the input impedance of audio amplifier.



3.11.4. Earphone Interface Application

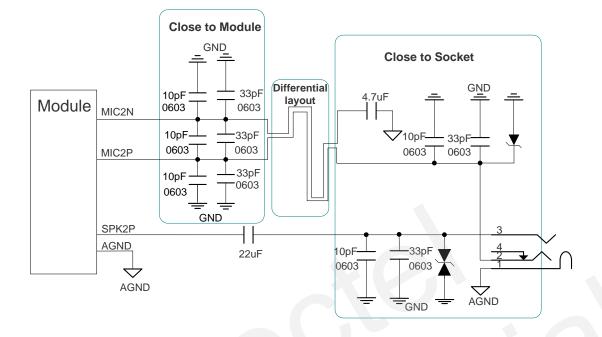


Figure 26: Reference Design for an Earphone

Table 14: Microphone Characteristics

Parameter	Min.	Тур.	Max.	Unit	
Working Voltage	1.65	1.8	1.95	V	
Working Current	20		1000	uA	

Table 15: Speaker Characteristics

Parameter			Min.	Тур.	Max.	Unit
Normal Output	Differential	Supply voltage	2.0	2.1	2.2	V
(AOUT1)	Differential	Load resistance	25.6	32		ohm
Auxiliary Output	0	Supply voltage	2.0	2.1	2.2	V
(AOUT2)	Single ended	Load resistance	12	16		ohm
Output Power of A	OUT1 and AOUT2		50		mW	



3.12. PCM and I2C Interface

UC15 provides one Pulse Code Modulation (PCM) digital interface, supports 8-bit A-law and µ-law, and 16-bit linear data formats. UC15 supports the following modes:

- Primary mode (short sync, works as both master and slave)
- Auxiliary mode (long sync, works as master only)

UC15 supports an 8 kHz short sync mode at 2048 kHz, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge, and the PCM_SYNC falling edge represents the MSB.

UC15 also supports an 8 kHz long sync mode at 128 kHz, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge, and the PCM_SYNC rising edge represents the MSB.

The following figures show the different timing relationships of these modes.

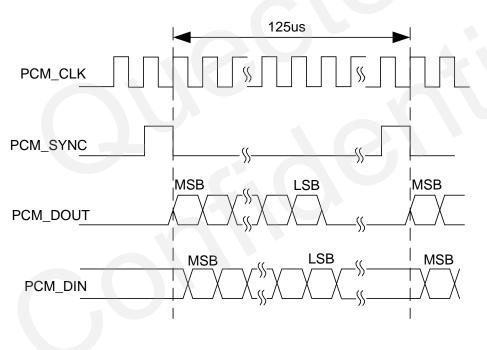


Figure 27: Primary Mode Timing



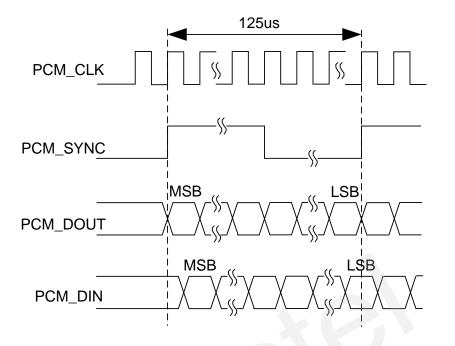


Figure 28: Auxiliary Mode Timing

The following table shows the pin definition of PCM and I2C interface which can be applied on audio codec design.

Pin Name	Pin No.	I/O	Description	Comment
PCM_DOUT	34	DO	PCM data output	2.6V power domain .lf unused, keep it open.
PCM_DIN	35	DI	PCM data input	2.6V power domain. If unused, keep it open.
PCM_CLK	36	10	PCM data bit clock	2.6V power domain. If unused, keep it open.
PCM_SYNC	37	IO	PCM data frame sync signal	2.6V power domain. If unused, keep it open.
I2C_SDA	38	IO	I2C serial data	External pull-up resistor is required. 2.6V only. If unused, keep it open.
I2C_SCL	39	DO	I2C serial clock	External pull-up resistor is required. 2.6V only. If unused, keep it open.



UC15's firmware has integrated the configuration on NAU8814 application with I2C interface. The default configuration is master mode which uses short sync data format with 2048 kHz clock. Please refer to *document [1]* for details about the command **AT+QDAI**.

The following figure shows the reference design of PCM interface with external codec IC.

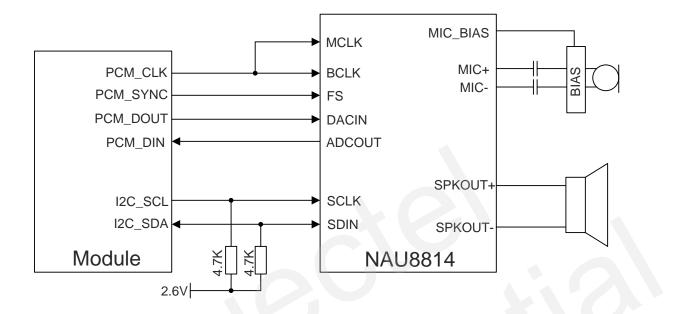


Figure 29: Reference Circuit of PCM Application with Audio Codec

NOTES

- It is recommended to reserve RC (R=22Ω, C=22pF) circuit on the PCM lines, especially for PCM_CLK.
- 2. I2C bus is the standard interface, which is used with NAU8814 application by default.

3.13. USIM Card Interface

The USIM card interface circuitry meets ETSI and IMT-2000 USIM interface requirements. Both 1.8V and 3.0V USIM cards are supported.

Table 17: Pin Definition of the	USIM Interfaces
---------------------------------	------------------------

Pin Name	Pin No.	I/O	Description	Comment
USIM VDD	12	PO	Power supply for USIM card.	Either 1.8V or 3.0V is supported
				by the module automatically.



USIM_DATA	13	IO	Data signal of USIM card.	
USIM_CLK	14	DO	Clock signal of USIM card.	
USIM_RST	15	DO	Reset signal of USIM card.	
USIM_ PRESENCE	11	DI	USIM card detection input.	2.6V power domain
USIM_GND	8		Specified ground for USIM card.	

The following figure shows the reference design of the 8-pin USIM card.

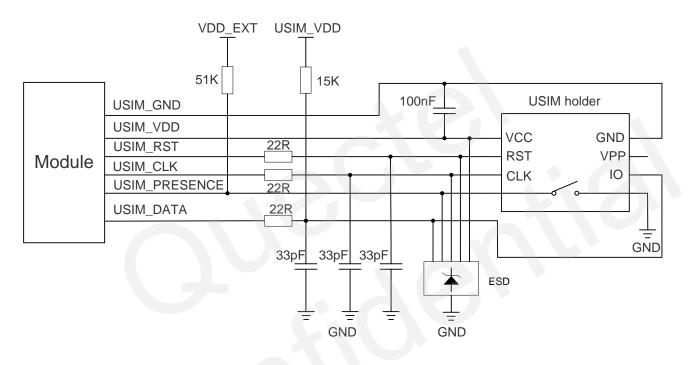


Figure 30: Reference Circuit of the 8-Pin USIM Card

NOTE

Some AT commands are invalid when USIM card is not applied.

UC15 supports USIM card hot-plugging via the USIM_PRESENCE pin. For details, refer to **document [1]** about the command **AT+QSIMDET**. If you do not need the USIM card detection function, keep USIM_PRESENCE unconnected. The reference circuit for using a 6-pin USIM card holder is illustrated as the following figure.



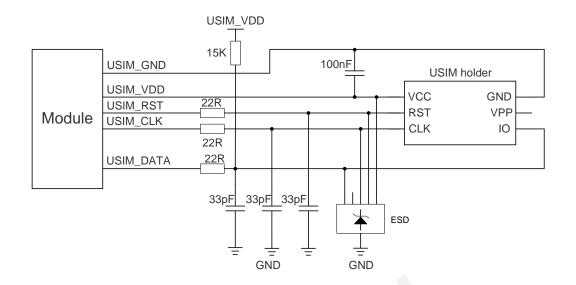


Figure 31: Reference Circuit of the 6-Pin USIM Card

In order to enhance the reliability and availability of the USIM card in customer's application, please follow criteria below in the USIM circuit design:

- Keep layout of USIM card as close as possible to the module. Assure the possibility of the length of the trace is less than 200mm.
- Keep USIM card signal away from RF and VBAT alignment.
- Assure the ground between module and USIM cassette short and wide. Keep the width of ground and USIM_VDD no less than 0.5mm to maintain the same electric potential. The decouple capacitor of USIM_VDD should be less than 1uF and must be near to USIM cassette.
- To avoid cross-talk between USIM_DATA and USIM_CLK, keep them away with each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add TVS. The capacitance of ESD component is less than 50pF. The 22Ω resistors should be added in series between the module and the USIM card so as to suppress the EMI spurious transmission and enhance the ESD protection. The 33pF capacitors are used for filtering interference of GSM850/900. Please note that the USIM peripheral circuit should be close to the USIM card holder.
- The pull-up resistor on USIM_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion is applied.



3.14. USB Interface


UC15 contains one integrated Universal Serial Bus (USB) transceiver which complies with the USB 2.0 specification and supports high speed (480Mbps), full speed (12Mbps) and low speed (1.5Mbps) mode. The USB interface is primarily used for AT command, data transmission, software debug and firmware upgrade. The following table shows the pin definition of USB interface.

Pin Name	Pin No.	I/O	Description	Comment
USB_DP	62	Ю	USB differential data bus (positive)	Require differential impedance of 90Ω
USB_DM	63	Ю	USB differential data bus (negative)	Require differential impedance of 90Ω
USB_VBUS	64	PI	USB detection	3.0~5.25V Typical 5.0V

Table 18: USB Pin Description

More details about the USB 2.0 specifications, please visit http://www.usb.org/home.

The following figure shows the reference circuit of USB interface.

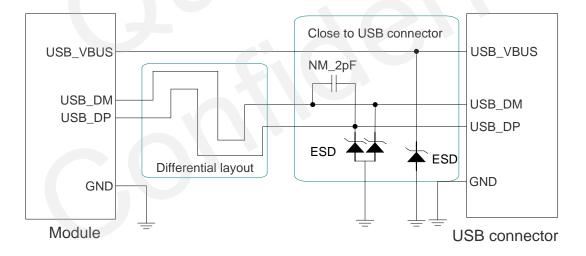






In order to ensure the USB interface design corresponding with the USB 2.0 specification, please comply with the following principles.

- It is important to route the USB signal traces as differential pairs with total grounding. The impedance of USB differential trace is 90ohm.
- Keep the ESD components as closer to the USB connector as possible.
- Pay attention to the influence of junction capacitance of ESD component on USB data lines. Typically, the capacitance value should be less than 2pF.
- Do not route signal traces under crystals, oscillators, magnetic devices and RF signal traces. It is important to route the USB differential traces in inner-layer with ground shielding not only upper and lower layer but also right and left side.

NOTE

UC15 module can only be used as a slave device.

The USB interface is recommended to be reserved for firmware upgrade in your design. The following figure shows the recommended test points.

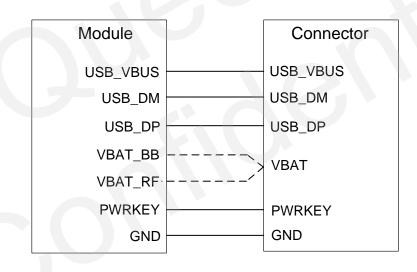



3.15. ADC Function

The module provides two analog-to-digital converters (ADC) to digitize the analog signal to 12-bit digital data. Using AT command **AT+QADC=0** can read the voltage value on ADC0 pin. Using AT command **AT+QADC=1** can read the voltage value on ADC1 pin. For more details of these AT commands, please refer to *document [1]*.

In order to improve the accuracy of ADC, the trace of ADC should be surrounded by ground.



Table 19: Pin Definition of the ADC

Pin Name	Pin NO.	Description
ADC0	41	General purpose analog to digital converter.
ADC1	40	General purpose analog to digital converter.

The following table describes the characteristics of the ADC function.

Table 20: Characteristics of the ADC

Parameter	Min.	Тур.	Max.	Unit
ADC0 Voltage Range	0		2.1	V
ADC1 Voltage Range	0		2.1	V
Sample Rate		2.4		MHz
ADC Resolution		12		bits

3.16. Network Status Indication

The module provides a pin named NETLIGHT to indicate the module network status which can be used to drive a LED. The following tables describe pin definition and logic level changes in different network status.

Table 21: Pin Definition of Network Indicator

Pin Name	Pin No.	1/0	Description	Comment
NETLIGHT	6	DO	Indicate the module network activity	2.6V power domain. If
	0	DO	status. unused, kee	unused, keep it open.

Table 22: Working State of the Network Indicator

Pin Name	Status	Description	
	200ms High/1800ms Low	Network searching	
NETLIGHT	1800ms High/200ms Low	ldle	



125ms High/125ms Low	Data transfer is ongoing
Always High	Voice calling
Always Low	Sleep

A reference circuit is shown in the following figure.

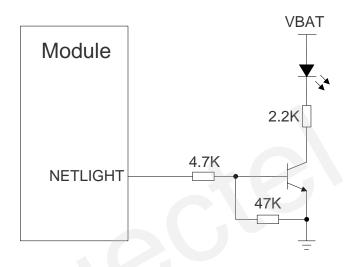


Figure 34: Reference Circuit of the Network Indicator

3.17. Operating Status Indication

The STATUS is used to indicate the module operation status. When the module is turned on normally, the STATUS will output high level.

Table 23: Pin Definition of STATUS

Pin Name	Pin No.	1/0	Description	Comment
STATUS	54	DO Indicate the module operation status.	2.6V power domain. If	
STATUS	STATUS 54 DO Indicate the module operation status.	unused, keep it open.		



A reference circuit is shown in the following figure.

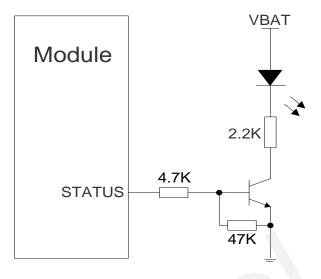


Figure 35: Reference Circuit of the STATUS



4 Antenna Interface

4.1. Antenna Interface

4.1.1. Pin Definition

Pin definition of RF antenna is shown as below.

Table 24: Pin Definition of the RF Antenna

Pin Name	Pin No.	I/O	Description	Comment
RF_ANT	43	IO	RF antenna pad	50Ω impedance

4.1.2. Operating Frequency

Table 25: Module Operating Frequencies

Band	Receive	Transmit	Unit
GSM850	869 ~ 894	824 ~ 849	MHz
EGSM900	925 ~ 960	880 ~ 915	MHz
DCS1800	1805 ~ 1880	1710 ~ 1785	MHz
PCS1900	1930 ~ 1990	1850 ~ 1910	MHz
UMTS2100	2110 ~ 2170	1920 ~ 1980	MHz
UMTS1900	1930 ~ 1990	1850 ~ 1910	MHz
UMTS900	925 ~ 960	880 ~ 915	MHz
UMTS850	869 ~ 894	824 ~ 849	MHz



4.1.3. Reference Design

The RF interface has an impedance of 50Ω . The reference design of RF antenna is shown as below. It should reserve a π -type matching circuit for better RF performance. The capacitors are not mounted by default.

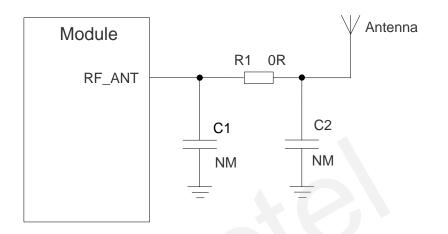


Figure 36: Reference Circuit of Antenna Interface

4.2. Antenna Installation

4.2.1. Antenna Requirement

The following table shows the requirements on GSM/UMTS antenna.

Table 26: Antenna Cable Requirements

Туре	Requirements
GSM850/EGSM900 UMTS850/900	Cable insertion loss < 0.5dB.
DCS1800/PCS1900 UMTS1900/2100	Cable insertion loss < 0.9dB.



Table 27: Antenna Requirements

Туре	Requirements
Frequency Range	UC15-A: GSM Quad-band: 850/900/1800/1900MHz UMTS Dual-band: 850/1900MHz UC15-E: GSM Dual-band: 900/1800MHz UMTS Dual-band: 900/2100MHz UC15-T: GSM Quad-band: 850/900/1800/1900MHz UMTS Dual-band: 850/2100MHz
VSWR	≤ 2
Gain (dBi)	1
Max Input Power (W)	50
Input Impedance (Ω)	50
Polarization Type	Vertical

4.2.2. Install the Antenna with RF Connector

The following is the antenna installation with RF connector provided by HIROSE. The recommended RF connector is UF.L-R-SMT.



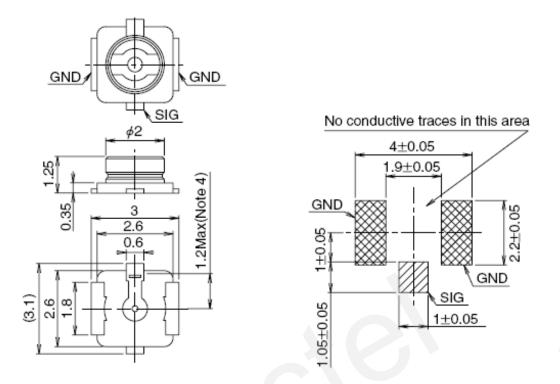


Figure 37: Dimensions of the UF.L-R-SMT Connector (Unit: mm)

You can use U.FL-LP serial connector listed in the following figure to match the UF.L-R-SMT.

	U.FL-LP-040	U.FL-LP-066	U.FL-LP(V)-040	U.FL-LP-062	U.FL-LP-088	
Part No.						
Mated Height	2.5mm Max. (2.4mm Nom.)	2.5mm Max. (2.4mm Nom.)	2.0mm Max. (1.9mm Nom.)	2.4mm Max. (2.3mm Nom.)	2.4mm Max. (2.3mm Nom.)	
Applicable cable	Dia. 0.81mm Coaxial cable	Dia. 1.13mm and Dia. 1.32mm Coaxial cable	Dia. 0.81mm Coaxial cable	Dia. 1mm Coaxial cable	Dia. 1.37mm Coaxial cable	
Weight (mg)	53.7	59.1	34.8	45.5	71.7	
RoHS	YES					

Figure 38: Mechanicals of UF.L-LP Connectors (Unit: mm)



The following figure describes the space factor of mated connector:

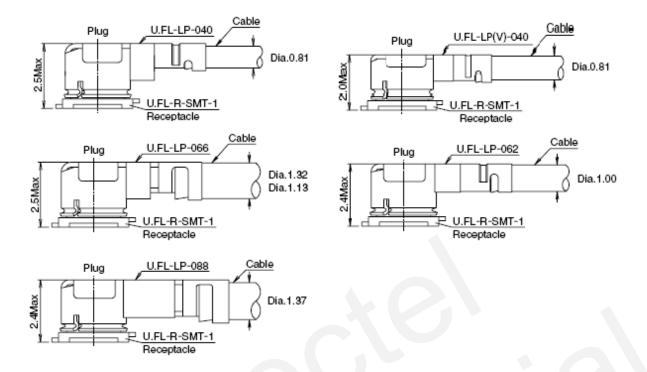


Figure 39: Space Factor of Mated Connector (Unit: mm)

For more details, please visit <u>http://www.hirose.com</u>.



5 Electrical, Reliability and Radio Characteristics

5.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of module are listed in the following table:

Table 28: Absolute Maximum Ratings

Parameter	Min.	Max.	Unit
VBAT_RF/VBAT_BB	-0.5	4.7	V
USB_VBUS	-0.5	6.0	V
Peak Current of VBAT_BB	0	0.8	A
Peak Current of VBAT_RF	0	1.8	A
Voltage at Digital Pins (1.8V digital I/O)	-0.3	2.1	V
Voltage at Digital Pins (2.6V digital I/O)	-0.3	2.9	V
Voltage at ADC0	0	2.2	V
Voltage at ADC1	0	2.2	V



5.2. Power Supply Ratings

Parameter	Description	Conditions	Min.	Тур.	Max.	Unit
VBAT	VBAT_BB and VBAT_RF	Voltage must stay within the min/max values, including voltage drop, ripple, and spikes.	3.3	3.8	4.3	V
	Voltage drop during transmitting burst	Maximum power control level on GSM850 and EGSM900.			400	mV
I _{VBAT}	Peak supply current (during transmission slot)	Maximum power control level on GSM850 and EGSM900.		1.8	2.0	A
USB_VBUS	USB detection	00	3.0	5.0	5.25	V

Table 29: The Module Power Supply Ratings

5.3. Operating Temperature

The operating temperature is listed in the following table.

Table 30: Operating Temperature

Parameter	Min.	Тур.	Max.	Unit
Normal Temperature	-35	+25	+80	°C
Restricted Operation ¹⁾	-40 ~ -35		+80 ~ +85	°C
Storage Temperature -45			+90	°C

NOTE

^{"1)}" When the module works within the temperature range, the deviations from the RF specification may occur. For example, the frequency error or the phase error would increase.



5.4. Current Consumption

The values of current consumption are shown below.

Table 31: Module Current Consumption

Parameter	Description	Conditions	Тур.	Unit
	OFF state supply current	Power down	65	uA
		Sleep (USB disconnected)	3.1 @DRX=2 2.0 @DRX=5 1.6 @DRX=9	mA
	GSM/GPRS supply current	Sleep (USB suspended)	3.3 @DRX=2 2.2 @DRX=5 1.8 @DRX=9	mA
		Idle (USB disconnected) @DRX=5	30	mA
		Idle (USB connected) @DRX=5	60	mA
I _{VBAT}		Sleep (USB disconnected)	3.4 @DRX=6 2.4 @DRX=7 2.0 @DRX=8 1.6 @DRX=9	mA
	WCDMA supply current	Sleep (USB suspended)	1.6 @DRX=9 3.6 @DRX=6 2.4 @DRX=7 2.1 @DRX=8 1.7 @DRX=9	mA
		Idle (USB disconnected) @DRX=6	30	mA
		Idle (USB connected) @DRX=6	1.7 @DRX=9	mA
		GSM850 1DL/1UL @PCL=5	222	mA
		GSM850 4DL/1UL @PCL=5	235	mA
		GSM850 3DL/2UL @PCL=5	335	mA
	GPRS data transfer	GSM850 2DL/3UL @PCL=5	420	mA
		GSM850 1DL/4UL @PCL=5	480	mA
		EGSM900 1DL/1UL @PCL=5	220	mA
		EGSM900 4DL/1UL @PCL=5	230	mA



	EGSM900 3DL/2UL @PCL=5	330	mA
	EGSM900 2DL/3UL @PCL=5	415	mA
	EGSM900 1DL/4UL @PCL=5	470	mA
	DCS1800 1DL/1UL @PCL=0	180	mA
	DCS1800 4DL/1UL @PCL=0	180	mA
	DCS1800 3DL/2UL @PCL=0	250	mA
	DCS1800 2DL/3UL @PCL=0	307	mA
	DCS1800 1DL/4UL @PCL=0	345	mA
	PCS1900 1DL/1UL @PCL=0	170	mA
	PCS1900 4DL/1UL @PCL=0	170	mA
	PCS1900 3DL/2UL @PCL=0	238	mA
	PCS1900 2DL/3UL @PCL=0	295	mA
	PCS1900 1DL/4UL @PCL=0	331	mA
	UMTS2100 HSDPA @max power	420	mA
WCDMA data	UMTS1900 HSDPA @max power	475	mA
transfer	UMTS850 HSDPA @max power	440	mA
	UMTS900 HSDPA @max power	445	mA
	GSM850 @PCL=5	260	mA
	EGSM900 @PCL=5	250	mA
GSM voice call	DCS1800 @PCL=0	200	mA
	PCS1900 @PCL=0	188	mA
	UMTS2100 @max power	430	mA
WCDMA voice	UMTS1900 @max power	480	mA
call	UMTS850 @max power	440	mA
	UMTS900 @max power	450	mA



5.5. RF Output Power

Table 32: Module Conducted RF Output Power

Frequency	Max.	Min.
GSM850	33dBm±2dB	5dBm±5dB
EGSM900	33dBm±2dB	5dBm±5dB
DCS1800	30dBm±2dB	0dBm±5dB
PCS1900	30dBm±2dB	0dBm±5dB
UMTS850	24dBm+1/-3dB	-56dBm±5dB
UMTS900	24dBm+1/-3dB	-56dBm±5dB
UMTS1900	24dBm+1/-3dB	-56dBm±5dB
UMTS2100	24dBm+1/-3dB	-56dBm±5dB

NOTE

In GPRS 4 slots TX mode, the max output power is reduced by 2.5dB. This design conforms to the GSM specification as described in Chapter 13.16 of 3GPP TS 51.010-1.

5.6. RF Receiving Sensitivity

Table 33: Module Conducted Receiving Sensitivity

Frequency	Receive Sensitivity (Typ.)	Unit
GSM850	-108.5	dBm
EGSM900	-108.5	dBm
DCS1800	-108.5	dBm
PCS1900	-108.5	dBm
UMTS850	-110	dBm
UMTS900	-110	dBm
UMTS1900	-110	dBm



UMTS2100

-110

dBm

5.7. Electrostatic Discharge

The module is not protected against electrostatics discharge (ESD) in general. Consequently, it is subject to ESD handling precautions that typically apply to ESD sensitive components. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the module.

The following table shows the module electrostatics discharge characteristics.

Table 34: Electrostatics Discharge Characteristics


Tested Points	Contact Discharge	Air Discharge	Unit
VBAT, GND	±5	±10	kV
Antenna Interface	±4	±8	kV
Other Interfaces	±0.5	±1	kV



6 Mechanical Dimensions

This chapter describes the mechanical dimensions of the module. All dimensions are measured in mm.

6.1. Mechanical Dimensions of the Module

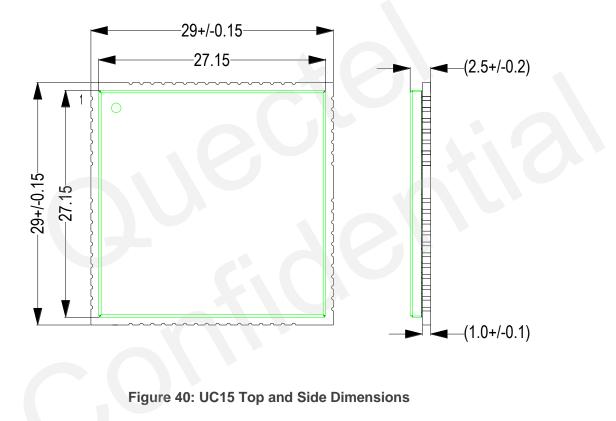



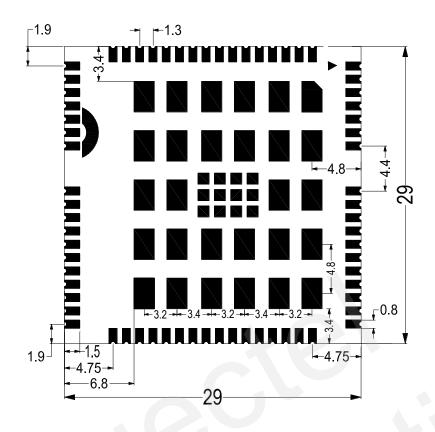


Figure 41: UC15 Bottom Dimensions (Bottom View)

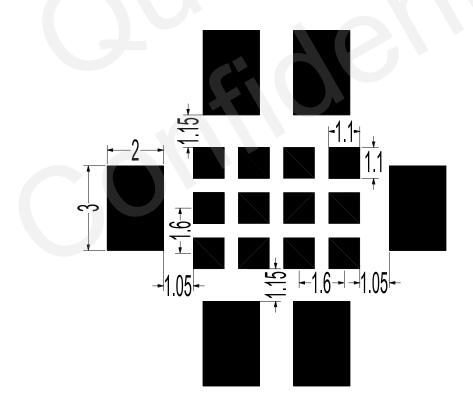


Figure 42: Bottom Pads Dimensions (Bottom View)



6.2. Footprint of Recommendation

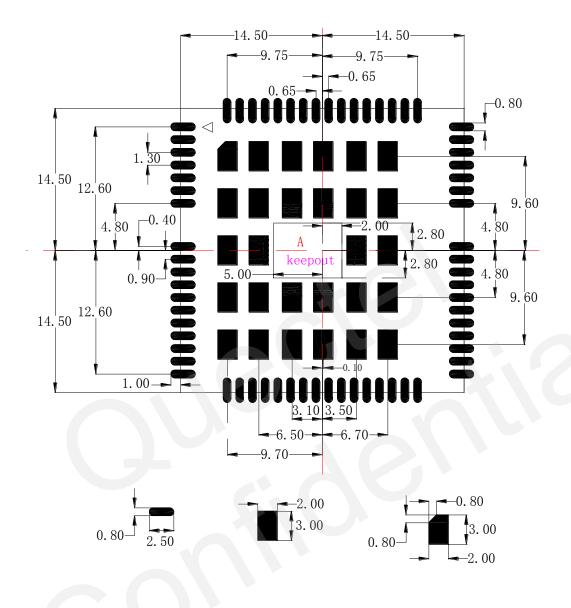


Figure 43: Recommended Footprint (Top View)

NOTES

- 1. Refer to *Figure 2* about the pin distribution (especially for pin 65, 66, 67 and 68).
- 2. The area A should be kept out. And the 69~80 pins in area A should not be designed in schematic and PCB decal.
- 3. In order to maintain the module, keep about 3mm between the module and other components in the host PCB.



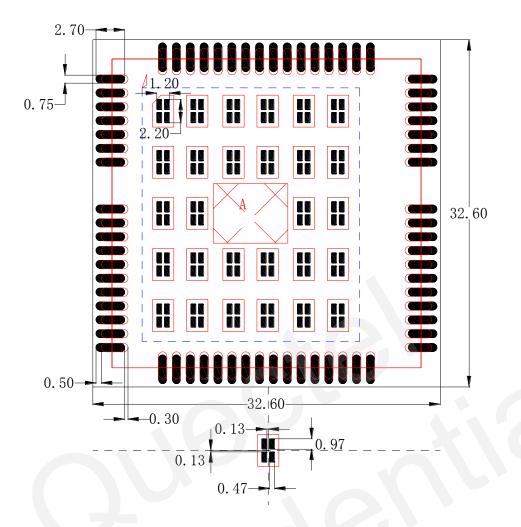


Figure 44: Recommend Stencil

NOTES

- 1. The thickness of stencil for the pads at the bottom of module is recommended as 0.18mm, and the thickness of LCC pins is recommended as 0.2mm.
- 2. For better SMT solder, the GND pad at the bottom of the module is divided into four small pads.



6.3. Top View of the Module



Figure 45: Top View of the Module

6.4. Bottom View of the Module

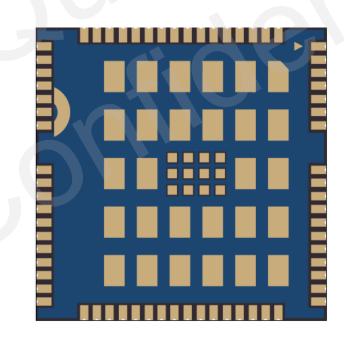


Figure 46: Bottom View of the Module



7 Storage and Manufacturing

7.1. Storage

UC15 is stored in the vacuum-sealed bag. The restriction of storage condition is shown as below.

Shelf life in sealed bag is 12 months at < 40°C/90%RH.

After this bag is opened, devices that will be subjected to reflow solder or other high temperature process must be:

- Mounted within 72 hours at factory conditions of \leq 30°C/60%RH.
- Stored at < 10% RH.

Devices require bake, before mounting, if:

- Humidity indicator card is > 10% when read 23°C±5°C.
- Mounted for more than 72 hours at factory conditions of ≤ 30°C/60% RH.

If baking is required, devices may be baked for 48 hours at 125°C±5°C.

NOTE

As plastic container cannot be subjected to high temperature, module needs to be taken out from container to high temperature (125°C) bake. If shorter bake times are desired, please refer to IPC/JEDECJ-STD-033 for bake procedure.

7.2. Manufacturing and Welding

The squeegee should push the paste on the surface of the stencil that makes the paste fill the stencil openings and penetrate to the PCB. The force on the squeegee should be adjusted so as to produce a clean stencil surface on a single pass. To ensure the module soldering quality, the thickness of stencil at the hole of the module pads should be 0.18mm. For details, please refer to **document [4]**.



It is suggested that peak reflow temperature is 235~245°C (for SnAg3.0Cu0.5 alloy). Absolute max reflow temperature is 260°C. To avoid damage to the module when it was repeatedly heated, it is suggested that the module should be mounted after the first panel has been reflowed. The following picture is the actual diagram which we have operated.

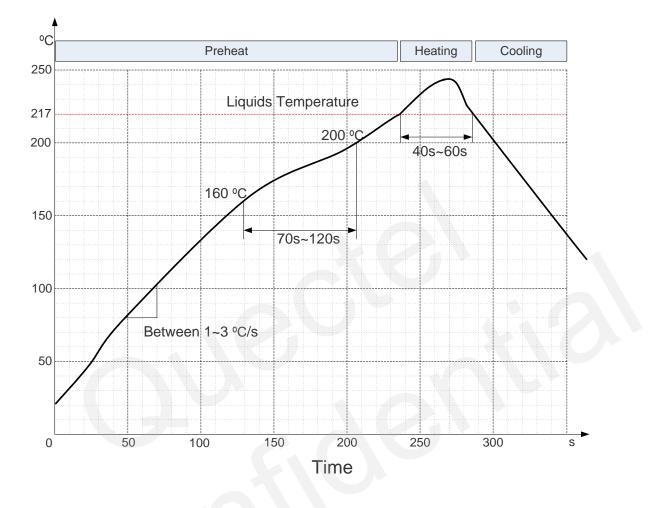


Figure 47: Reflow Soldering Profile



7.3. Packaging

UC15 is packaged in the tap and reel carriers. One reel is 12.4m length and contains 250pcs modules. The following figure shows the package details.

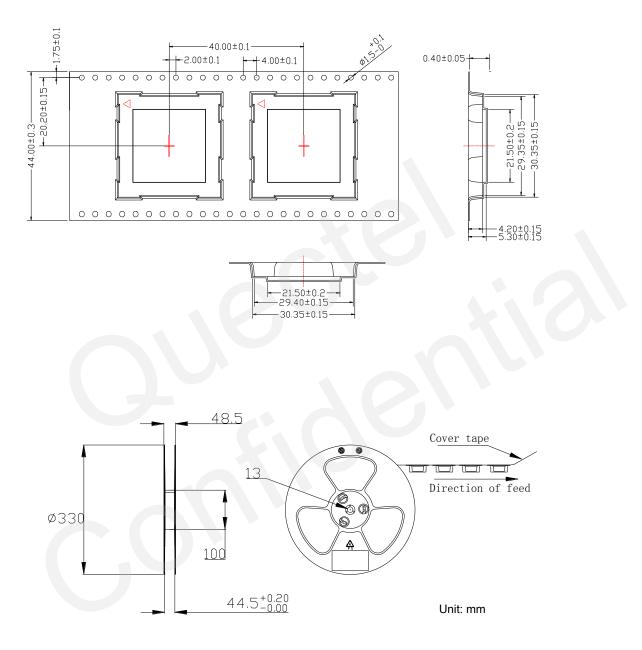


Figure 48: Carrier Tape



8 Appendix A Reference

Table 35: Related Documents

SN	Document Name	Remark
[1]	Quectel_UC15_AT_Commands_Manual	UC15 AT commands manual
[2]	Quectel_M10_EVB_User_Guide	M10 EVB user guide
[3]	Quectel_UC15_Reference_Design	UC15 reference design
[4]	Quectel_Module_Secondary_SMT_User_Guide	Module secondary SMT user guide

Table 36: Terms and Abbreviations

Abbreviation	Description
AMR	Adaptive Multi-rate
bps	Bits Per Second
СНАР	Challenge Handshake Authentication Protocol
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear to Send
DRX	Discontinuous Reception
DCE	Data Communications Equipment (typical module)
DTE	Data Terminal Equipment (typical computer, external controller)
DTR	Data Terminal Ready
DTX	Discontinuous Transmission



EFR	Enhanced Full Rate
EGSM	Extended GSM900 Band (including standard GSM900 band)
ESD	Electrostatic Discharge
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GSM	Global System for Mobile Communications
HR	Half Rate
HSDPA	High Speed Down Link Packet Access
IMEI	International Mobile Equipment Identity
Imax	Maximum Load Current
LED	Light Emitting Diode
LSB	Least Significant Bit
ME	Mobile Equipment
МО	Mobile Originated
MS	Mobile Station (GSM Engine)
MT	Mobile Terminated
PAP	Password Authentication Protocol
РВССН	Packet Broadcast Control Channel
РСВ	Printed Circuit Board
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
PSK	Phase Shift Keying
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase Shift Keying
RF	Radio Frequency



RMS	Root Mean Square (value)
Rx	Receive
SIM	Subscriber Identification Module
SMS	Short Message Service
ТХ	Transmitting Direction
UART	Universal Asynchronous Receiver & Transmitter
UMTS	Universal Mobile Telecommunications System
URC	Unsolicited Result Code
USIM	Universal Subscriber Identity Module
USSD	Unstructured Supplementary Service Data
Vmax	Maximum Voltage Value
Vnorm	Normal Voltage Value
Vmin	Minimum Voltage Value
V _{IH} max	Maximum Input High Level Voltage Value
V _{IH} min	Minimum Input High Level Voltage Value
V _{IL} max	Maximum Input Low Level Voltage Value
V _{IL} min	Minimum Input Low Level Voltage Value
V _I max	Absolute Maximum Input Voltage Value
V _I min	Absolute Minimum Input Voltage Value
V _{OH} max	Maximum Output High Level Voltage Value
V _{OH} min	Minimum Output High Level Voltage Value
V _{OL} max	Maximum Output Low Level Voltage Value
V _{OL} min	Minimum Output Low Level Voltage Value
VSWR	Voltage Standing Wave Ratio
WCDMA	Wideband Code Division Multiple Access



9 Appendix B GPRS Coding Scheme

Table 37: Description of Different Coding Schemes

Scheme	CS-1	CS-2	CS-3	CS-4
Code Rate	1/2	2/3	3/4	1
USF	3	3	3	3
Pre-coded USF	3	6	6	12
Radio Block excl.USF and BCS	181	268	312	428
BCS	40	16	16	16
Tail	4	4	4	
Coded Bits	456	588	676	456
Punctured Bits	0	132	220	-
Data Rate Kb/s	9.05	13.4	15.6	21.4



10 Appendix C GPRS Multi-slot Class

Twenty-nine classes of GPRS multi-slot modes are defined for MS in GPRS specification. Multi-slot classes are product dependant, and determine the maximum achievable data rates in both the uplink and downlink directions. Written as 3+1 or 2+2, the first number indicates the amount of downlink timeslots, while the second number indicates the amount of uplink timeslots. The active slots determine the total number of slots the GPRS device can use simultaneously for both uplink and downlink communications. The description of different multi-slot classes is shown in the following table.

Multislot Class	Downlink Slots	Uplink Slots	Active Slots
1	1	1	2
2	-2	1	-3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5

Table 38: Description of Different Coding Schemes



11 Appendix D EDGE Modulation and Coding Scheme

Table 39: EDGE Modulation and Coding Scheme

Coding Scheme	Modulation	Coding Family	1 Timeslot	2 Timeslot	4 Timeslot
CS-1:	GMSK	/	9.05kbps	18.1kbps	36.2kbps
CS-2:	GMSK	1	13.4kbps	26.8kbps	53.6kbps
CS-3:	GMSK	1	15.6kbps	31.2kbps	62.4kbps
CS-4:	GMSK	1	21.4kbps	42.8kbps	85.6kbps
MCS-1	GMSK	С	8.80kbps	17.60kbps	35.20kbps
MCS-2	GMSK	В	11.2kbps	22.4kbps	44.8kbps
MCS-3	GMSK	А	14.8kbps	29.6kbps	59.2kbps
MCS-4	GMSK	С	17.6kbps	35.2kbps	70.4kbps
MCS-5	8-PSK	В	22.4kbps	44.8kbps	89.6kbps
MCS-6	8-PSK	А	29.6kbps	59.2kbps	118.4kbps
MCS-7	8-PSK	В	44.8kbps	89.6kbps	179.2kbps
MCS-8	8-PSK	А	54.4kbps	108.8kbps	217.6kbps
MCS-9	8-PSK	А	59.2kbps	118.4kbps	236.8kbps